

WG1605 配線図

JOINT POINTS

JOINT A: The points below are joined.

IGN1 FUSE (15A)
ALTERNATOR_PIN_2
VIC2_PIN_3
COIL_CTL_#1_2_3_4_PIN_L
INJ_CTL_#1_2_3_4_PIN_L
O2_SENSOR_PRE_CATALYST_PIN_C
O2_SENSOR_POST_CATALYST_PIN_C

JOINT B: The points below are joined.


BATTERY+
KEY_SWITCH_PIN_OFF
ALTERNATOR_CHARGE_INDICATION_LAMP
MIL_LAMP

JOINT C: The points below are joined.

ECM_PIN_19(CM_EX11)
THROTTLE_ACTUATOR_PIN_3
TMAP(BOOST)_PIN_B
FPM_PIN_C
VIC1_PIN_W

JOINT D: The points below are joined.

ECM_PIN_20(CM_EX11)
COOLANT_TEMPERATURE_SENSOR_PIN1
O2_SENSOR_PRE_CATALYST_PIN_A
O2_SENSOR_POST_CATALYST_PIN_A
THROTTLE_ACTUATOR_PIN_2
TMAP(BOOST)_PIN_C
FPM_PIN_A
VIC1_PIN_L

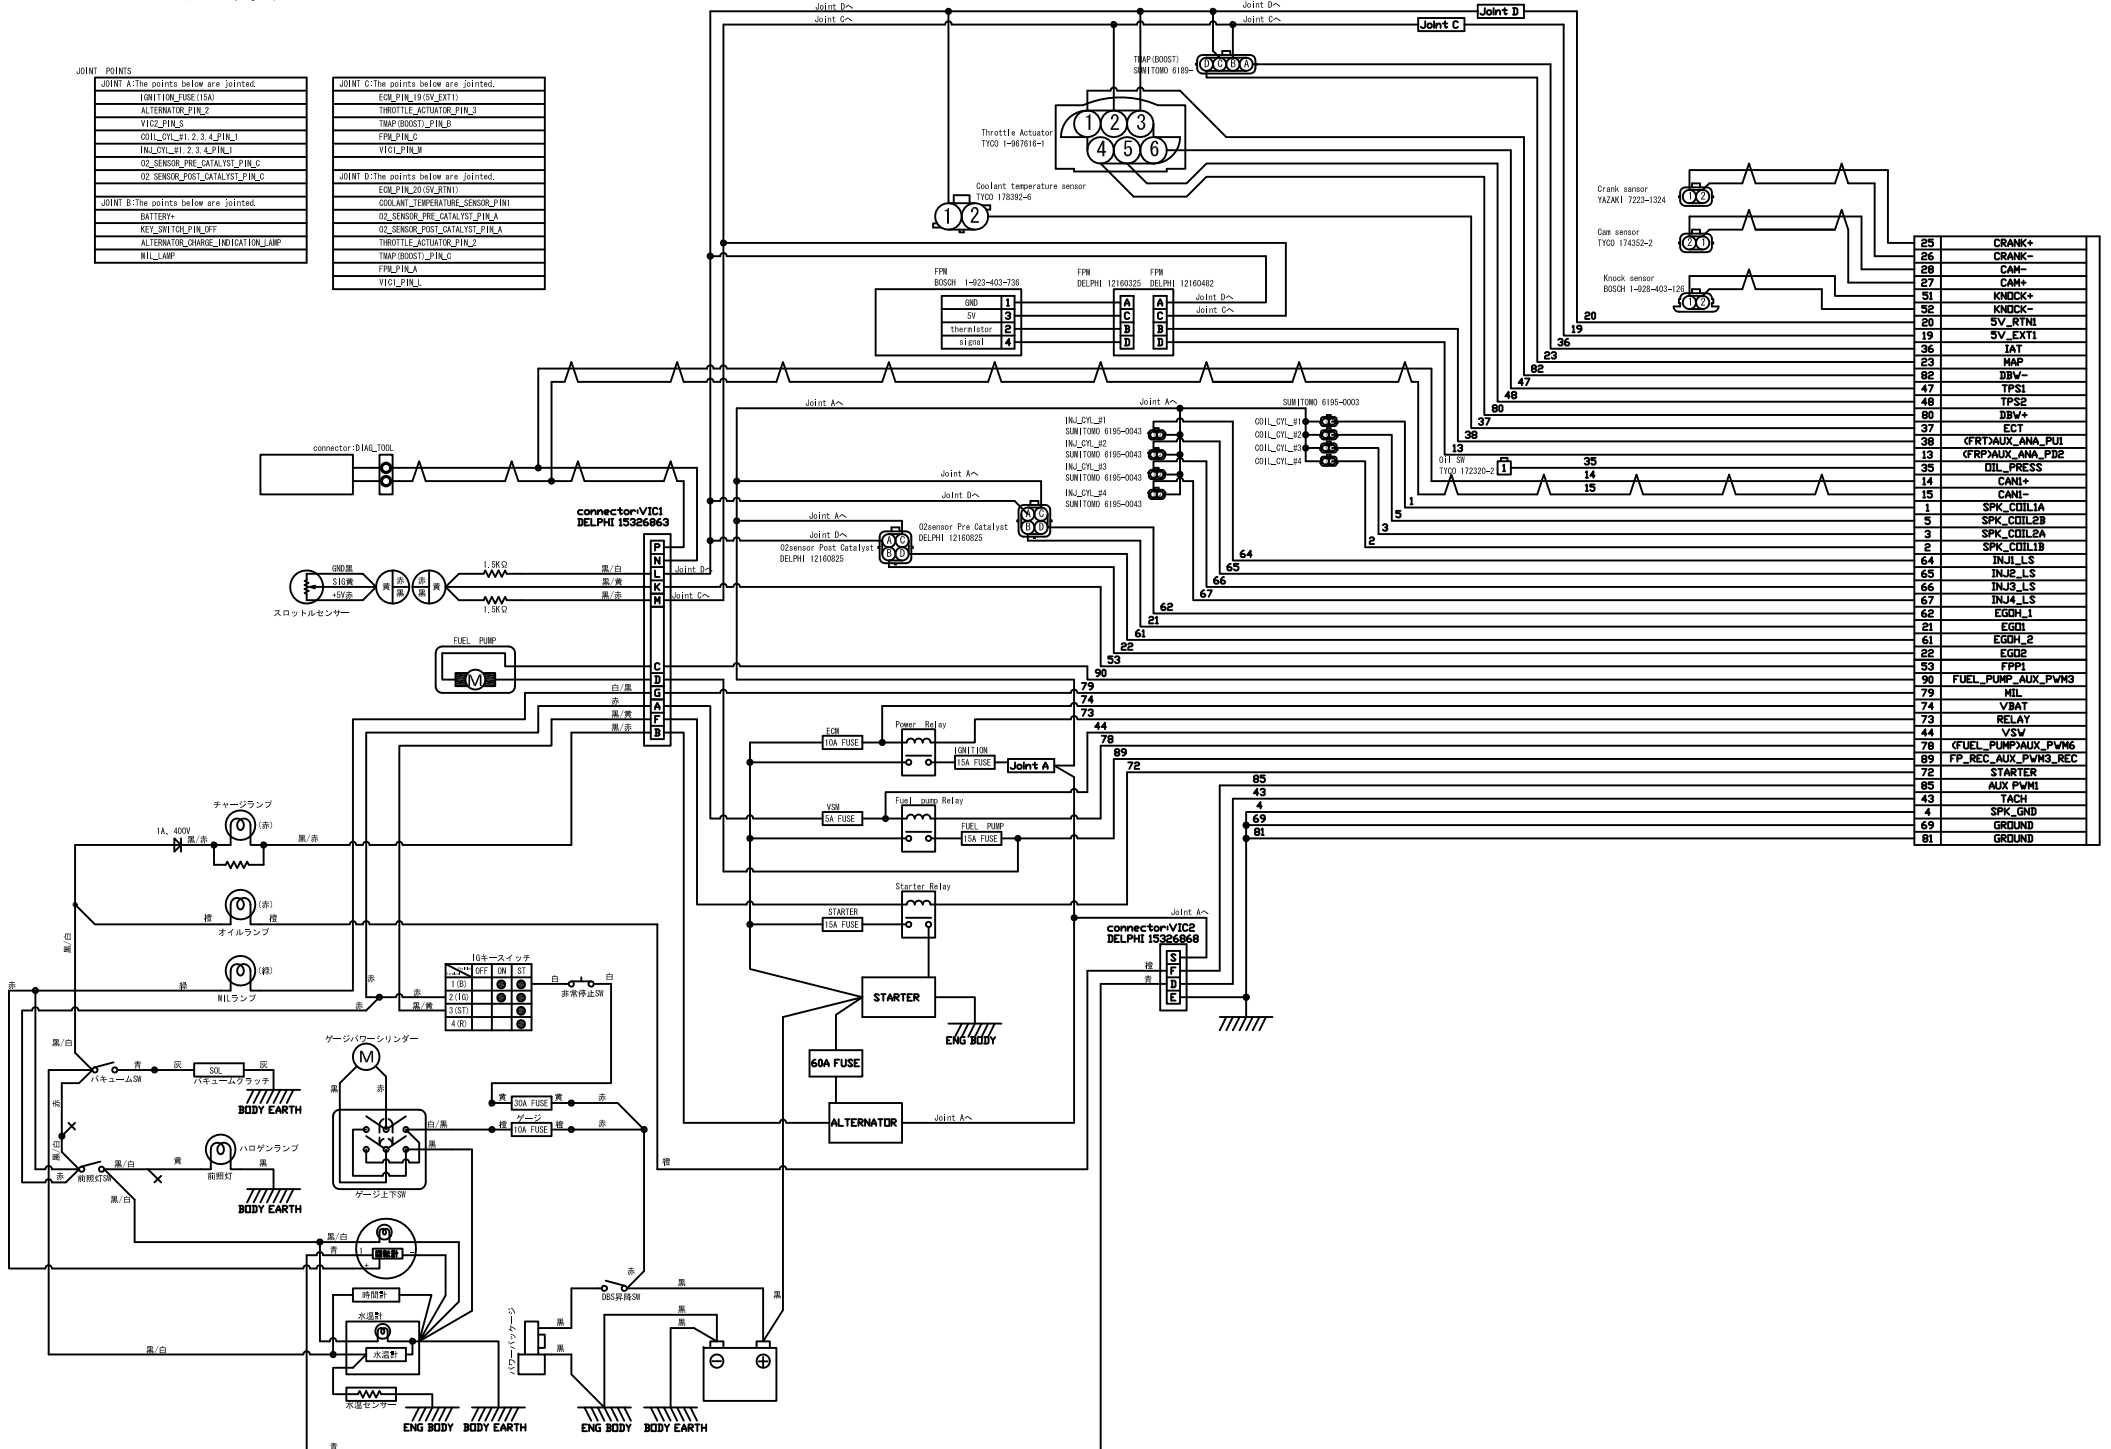

25	CRANK+
26	CRANK-
28	CAM-
27	CAM+
51	KINDCK+
52	KINDCK-
20	SV_RTH1
19	SV_EX11
36	IAT
23	NAP
82	DBV-
47	TPS2
48	TPS2
80	DBV+
37	ECT
38	CFRTAUX_ANA_PUI
13	CFRTAUX_ANA_PDE
35	OIL_PRESS
14	CANI+
15	CANI-
1	SPK_CHIL1A
5	SPK_CHIL2B
3	SPK_CHIL2A
2	SPK_CHIL1B
64	INJ1_LS
65	INJ2_LS
66	INJ3_LS
67	INJ4_LS
62	EGGH_1
21	EGGH_2
25	EGDE
53	FPM1
90	FUEL_PUMP_AUX_PVM3
79	MIL
74	VBAT
73	RELAY
44	VSV
78	FUEL_PUMP_AUX_PVM6
89	FP_REC_AUX_PVM3_REC
72	STARTER
85	AUX_PVM1
43	TACH
4	SPK_GND
69	GROUND
81	GROUND